



Audio Amplifiers	Aiwa	0406
Audio Amplifiers	Bose	0674
Audio Amplifiers	Carver	0269
Audio Amplifiers	Curtis Mathes	0300
Audio Amplifiers	Denon	0160
Audio Amplifiers	GE	0078
Audio Amplifiers	Harman/Kardon	0892
Audio Amplifiers	JVC	0331
Audio Amplifiers	Linn	0269
Audio Amplifiers	Luxman	0165
Audio Amplifiers	Magnavox	0269
Audio Amplifiers	Marantz	0269 0892 0321
Audio Amplifiers	Nakamichi	0321
Audio Amplifiers	Optimus	0300 0395
Audio Amplifiers	anasonic	0308
Audio Amplifiers	Panasonic	0308
Audio Amplifiers	Parasound	0246
Audio Amplifiers	Philips	0269 0892
Audio Amplifiers	Pioneer	0013 0300
Audio Amplifiers	Polk Audio	0269 0892
Audio Amplifiers	RCA	0300
Audio Amplifiers	Realistic	0395
Audio Amplifiers	Sansui	0321
Audio Amplifiers	Sony	0220 0689
Audio Amplifiers	Soundesign	0078 0211
Audio Amplifiers	Technics	0308 0521
Audio Amplifiers	Victor	0331
Audio Amplifiers	Wards	0013 0078 0211
Audio Amplifiers	Yamaha	0354
Cable	ABC	0003 0008 0014 0017 0007 0011 0013 0001
Cable	Allegro	0153 0315
Cable	Americast	0899
Cable	Antronix	0022 0207
Cable	Archer	0153 0797 0022 0207
Cable	BBT	0267
Cable	Belcor	0056
Cable	Bell & Howell	0014
Cable	Bell South	0899
Cable	Cable Star	0056
Cable	Cabletenna	0022

Cable	Cableview	0022
Cable	Century	0153
Cable	Citizen	0153 0315
Cable	Colour Voice	0025 0031
Cable	Comtronics	0040
Cable	Contec	0019
Cable	Digi	0637
Cable	Eastern	0002
Cable	Emerson	0797
Cable	Everquest	0015 0040
Cable	Focus	0400
Cable	FutureVision	0649
Cable	GC Electronics	0056 0207
Cable	Garrard	0153
Cable	Gemini	0015 0797 0070
Cable	General Instrument	0476 0810 0276 0011
Cable	GoldStar	0144 0040
Cable	Goodmind	0797 0770
Cable	Hamlin	0020 0259 0009 0034 0273
Cable	Hitachi	0011
Cable	Hytex	0007
Cable	Jasco	0015 0153 0315
Cable	Jerrold	0003 0476 0012 0810 0276 0014 0015 0011 0024
Cable	Linsay	0440
Cable	Magnavox	0027
Cable	Memorex	0000
Cable	Motorola	1106
Cable	Movie Time	0063 0156
Cable	NSC	0063 0156 0070
Cable	Nexus	0770
Cable	Novaplex	0618
Cable	Oak	0019 0007
Cable	Optimus	0021
Cable	Panasonic	0000 0107 0021
Cable	Panther	0637
Cable	Paragon	0000
Cable	Philips	0305 0317 0153 0025 0031 0027 0649
Cable	Pioneer	0144 0877 0533 0023
Cable	Pioneer	0533
Cable	Popular Mechanics	0400
Cable	Prelude	0770

Cable	Pulsar	0000
Cable	Quasar	0000
Cable	RCA	0021
Cable	RK	0479
Cable	Radio Shack	0015 0315 0797 0883
Cable	Realistic	0207
Cable	Recoton	0400
Cable	Regal	0020 0259 0273
Cable	Regency	0002
Cable	Rembrandt	0011 0070
Cable	Runco	0000
Cable	SL Marx	0040
Cable	Samsung	0144 0040
Cable	Scientific Atlanta	0008 0477 0877 0017 0006
Cable	Seam	0510
Cable	Signal	0015 0040
Cable	Signature	0011
Cable	Sprucer	0021
Cable	StarSight	0422 0542
Cable	Starcom	0003 0015
Cable	Stargate	0015 0040 0797 0770
Cable	Starquest	0015
Cable	Sylvania	0001
Cable	TFC	0310
Cable	TV86	0063
Cable	Tandy	0258
Cable	TeleCaption	0221
Cable	Teleview	0040
Cable	Texscan	0001
Cable	Timeless	0418
Cable	Tocom	0012 0013
Cable	Toshiba	0000
Cable	Tusa	0015
Cable	Unika	0153 0022 0207
Cable	United Artists	0007
Cable	Universal	0153 0191 0022 0056 0207 0077
Cable	Viewstar	0063 0258 0027
Cable	Zenith	0525 0000 0899 0054
Cable	Zentek	0400
DVD	Aiwa	0641
DVD	Apex	0672
DVD	B & K	0655 0662

DVD	Denon	0490 0634
DVD	Fisher	0670
DVD	GE	0522
DVD	Gradiente	0704
DVD	Harman/Kardon	0582
DVD	Hitachi	0664
DVD	Hiteker	0672
DVD	JVC	0558 0623
DVD	Kenwood	0534 0682
DVD	Konka	0711 0719 0720 0721
DVD	Magnavox	0503
DVD	Magnavox	0675
DVD	Marantz	0539
DVD	Mitsubishi	0521
DVD	Onkyo	0503 0627
DVD	Optimus	0571
DVD	Oritron	0651
DVD	Panasonic	0490 0677 0632 0678 0679
DVD	Philips	0503 0539
DVD	Pioneer	0525 0571 0632
DVD	Princeton	0674
DVD	Proscan	0522
DVD	RCA	0522 0571
DVD	Samsung	0573
DVD	Sharp	0630
DVD	Sherwood	0633
DVD	Sony	0533
DVD	Technics	0490
DVD	Techwood	0692
DVD	Theta Digital	0571
DVD	Toshiba	0503
DVD	Yamaha	0490 0545
DVD	Zenith	0503 0591
Satellite	AlphaStar	0772
Satellite	Chaparral	0216 0053
Satellite	Echostar	0775 1005 0280
Satellite	Expressvu	0775
Satellite	General Instrument	0361 0627 0869
Satellite	HTS	0775
Satellite	Hitachi	0819
Satellite	Homecable	0238
Satellite	Hughes Network Systems	0749

Satellite	IQ	0210
Satellite	IQ Prism	0210
Satellite	JVC	0775
Satellite	Jerrold	0361 0627
Satellite	Magnavox	0724 0722 0725
Satellite	Memorex	0724
Satellite	Next Level	0869
Satellite	Panasonic	0701
Satellite	Philips	0724 0722 1076 0725
Satellite	Primestar	0361 0627
Satellite	RCA	0566 0143 0855 0392
Satellite	Radio Shack	0869
Satellite	Realistic	0052
Satellite	STS	0210
Satellite	Samsung	1109
Satellite	Sony	0639
Satellite	Star Choice	0869
Satellite	Toshiba	0749 0790 0082
Satellite	Uniden	0724 0722 0052 0238
Satellite	Zenith	0856
TV	A-Mark	0003
TV	AOC	0030 0019 0185 0003 0052 0137
TV	Abex	0032
TV	Admiral	0093 0463
TV	Adventura	0046
TV	Aiko	0092
TV	Akai	0030
TV	Alaron	0179 0183
TV	Ambassador	0177
TV	America Action	0180
TV	Ampro	0751
TV	Anam	0180 0068
TV	Anam National	0055
TV	Archer	0003
TV	Audiovox	0451 0180 0623 0092 0003
TV	Baysonic	0180
TV	Belcor	0019
TV	Bell & Howell	0154 0016
TV	Bradford	0180
TV	Brockwood	0019
TV	Broksonic	0236 0463 0003
TV	CCE	0217 0329

TV	CXC	0180
TV	Candle	0030 0056 0046 0186
TV	Carnivale	0030
TV	Carver	0054
TV	Celebrity	0000
TV	Cineral	0451 0092
TV	Citizen	0060 0030 0056 0092 0039 0280 0046 0186
TV	Clairtone	0185
TV	Concerto	0056
TV	Contec	0180 0185 0157 0158
TV	Craig	0180
TV	Crosley	0054
TV	Crown	0180 0039
TV	Curtis Mathes	0047 0747 1147 1347 0054 0154 0051 0451 0093 0060 0030 0056 0145 0016 0166 0466 0039
TV	Daewoo	0451 0019 0623 0624 0092 0039 0091
TV	Daytron	0019
TV	Denon	0145
TV	Dumont	0017 0019
TV	Durabrand	0003 0171 0178 0180 0463 1034
TV	Dwin	0720 0774
TV	Electroband	0000 0185
TV	Electrohome	0381 0389 0409
TV	Emerson	0154 0236 0463 0180 0178 0179 0019 0623 0624 0177 0185 0282 0039 0280 0038 0158 0183 0182
TV	Envision	0030
TV	Fisher	0154 0159
TV	Fujitsu	0179 0683
TV	Funai	0180 0179 0171
TV	Futuretech	0180
TV	GE	0047 0747 1147 1347 0051 0451 0093 0178 0021 0055 0282 0135 0027 0279 0029 0174
TV	Gibraltar	0017 0030 0019
TV	GoldStar	0030 0178 0056 0019 0032 0001 0409 0106
TV	Gradiente	0053 0056 0392
TV	Grunpy	0180 0179
TV	Hallmark	0178
TV	Harley Davidson	0179

TV	Harman/Kardon	0054 0078
TV	Harvard	0180 0068
TV	Hitachi	0056 0145 0016 0151 0032 0038 0279 0413 0409
TV	Infinity	0054
TV	Inteq	0017
TV	JBL	0054
TV	JCB	0000
TV	JVC	0053 0182 0160
TV	Janeil	0046
TV	KEC	0180
TV	KMC	0106
TV	KTV	0180 0030 0185 0039 0280 0217 0183
TV	Kawasho	0158
TV	Kaypani	0052
TV	Kenwood	0030 0019
TV	Kloss	0046 0024 0078
TV	Konka	0707 0628 0632 0638 0703
TV	LG	0056
TV	LXI	0047 0747 0054 0154 0156 0178 0148
TV	Logik	0016
TV	Luxman	0056
TV	MEI	0185
TV	MGA	0150 0030 0178 0019
TV	MTC	0060 0030 0056 0019 0185 0091
TV	Magnavox	0054 1254 0030 0179 0187 0096 0020 0186 0386 0024 0028
TV	Majestic	0016 0015
TV	Marantz	0054 0030
TV	Matsushita	0250
TV	Megatron	0178 0145 0003
TV	Memorex	0154 0250 0463 0150 0178 0179 0056 0016 0106
TV	Midland	0047 0747 0017 0051 0135 0039 0032
TV	Minutz	0021
TV	Mitsubishi	0093 0150 0178 0019
TV	Motorola	0093 0055
TV	Multitech	0180 0217
TV	NAD	0156 0178 0166
TV	NEC	0030 0056 0019 0497
TV	NTC	0092

TV	Nikko	0030 0178 0092
TV	Noblex	0430
TV	Noshi	0018
TV	Onwa	0180
TV	Optimus	0154 0250 0166
TV	Optonica	0093 0165
TV	Orion	0236 0463 0179
TV	Panasonic	0051 0250 0055 0226
TV	Penney	0047 0747 1347 0156 0051 0060 0030 0178 0021 0056 0019 0018 0135 0039 0003 0027 0032
TV	Philco	0054 0463 0030 0145 0019 0096 0020 0028
TV	Philips	0054
TV	Pilot	0030 0019 0039
TV	Pioneer	0166 0679 0038
TV	Portland	0019 0092 0039
TV	Princeton	0717
TV	Prism	0051
TV	Proscan	0047 0747
TV	Proton	0178 0466 0003 0052
TV	Pulsar	0017 0019
TV	Quasar	0051 0250 0055 0165
TV	RCA	0047 0747 1047 1147 1247 1347 1447 0090 0051 0093 0019 0679 0018 0135 0038 0029 0174 0278
TV	Radio Shack	0047 0747 0154 0180 0030 0178 0056 0019 0165 0039 0032 0409
TV	Realistic	0154 0180 0030 0178 0056 0019 0165 0039 0032
TV	Rhapsody	0185 0183
TV	Runco	0017 0030 0603 0497
TV	SSS	0180 0019
TV	Sampo	0030 0039 0052 0032
TV	Samsung	0060 0030 0178 0056 0019 0032 0329 0427 0482
TV	Samsux	0039
TV	Sansei	0451
TV	Sansui	0463
TV	Sanyo	0154 0159 0146 0484
TV	Scimitsu	0019
TV	Scotch	0178
TV	Scott	0236 0180 0178 0179 0019
		0047 0747 0054 0154 0156

TV	Sears	0178 0179 0056 0171 0159 0146 0015 0148
TV	Semivox	0180
TV	Semp	0156
TV	Sharp	0093 0688 0165 0039 0386 0157
TV	Shogun	0019
TV	Signature	0016
TV	Simpson	0187 0186
TV	Sony	0000 0080 0111 0011
TV	Soundesign	0180 0178 0179 0186
TV	Spectricon	0003 0137
TV	Squareview	0171
TV	Starlite	0180
TV	Supre-Macy	0046
TV	Supreme	0000
TV	Sylvania	0054 0030 0096 0020 0381 0028
TV	Symphonic	0171
TV	TMK	0178 0056 0177
TV	TNCi	0017
TV	Tandy	0093
TV	Tatung	0055 0003
TV	Technics	0051 0250
TV	Technol Ace	0179
TV	Techwood	0051 0056 0003
TV	Teknika	0054 0180 0150 0060 0179 0056 0019 0016 0092 0039 0186 0312
TV	Telefunken	0056
TV	Toshiba	0154 0156 0060
TV	Toshiba	1256
TV	Tosonic	0185
TV	Totevision	0039
TV	Trical	0157
TV	Universal	0027
TV	Vector Research	0030
TV	Victor	0053
TV	Vidikron	0054 0242
TV	Vidtech	0178 0019
TV	Viking	0046 0312
TV	Wards	0054 0030 0178 0021 0179 0056 0019 0016 0165 0096 0020 0080 0027 0111 0028 0029 0174
TV	White-Westinghouse	0463 0623 0624

TV	Yamaha	0030 0019
TV	Zenith	0017 0463 0624 0016 0092
TV	Zonda	0003
TV VCR Combo	Broksonic	0002
TV VCR Combo	Citizen	0278
TV VCR Combo	Colt	0072
TV VCR Combo	Emerson	0002 0294
TV VCR Combo	Funai	0000
TV VCR Combo	GE	0240
TV VCR Combo	Harley Davidson	0000
TV VCR Combo	Hitachi	0000
TV VCR Combo	Lloyd's	0000
TV VCR Combo	Magnasonic	0278
TV VCR Combo	Magnavox	0000
TV VCR Combo	Magnin	0240
TV VCR Combo	MGA	0240
TV VCR Combo	Memorex	0037 0454 1037 1162 1262
TV VCR Combo	Optimus	0454 1162 1262
TV VCR Combo	Orion	0002
TV VCR Combo	Penney	0240 1035 1237
TV VCR Combo	Quasar	1162
TV VCR Combo	Radio Shack	1037
TV VCR Combo	RCA	0240
TV VCR Combo	Sansui	0000
TV VCR Combo	Sanyo	0240
TV VCR Combo	Sears	0000
TV VCR Combo	Sony	0000
TV VCR Combo	Symphonic	0000
TV VCR Combo	Thomas	0000
TV VCR Combo	Zenith	0000
VCR	Admiral	0048 0209
VCR	Adventura	0000
VCR	Aiko	0278
VCR	Aiwa	0037 0000 0307
VCR	Akai	0041 0106 0061 0053 0049
VCR	America Action	0278
VCR	American High	0035
VCR	Asha	0240
VCR	Audiovox	0037
VCR	Beaemark	0240
VCR	Bell & Howell	0104
VCR	Broksonic	0184 0121 0209 0002 0479 0295 0361 0211

VCR	CCE	0072 0278
VCR	Calix	0037
VCR	Canon	0035
VCR	Capehart	0020
VCR	Carver	0081
VCR	Cineral	0278
VCR	Citizen	0037 0278
VCR	Colt	0072
VCR	Craig	0037 0047 0240 0072 0271
VCR	Curtis Mathes	0035 0060 0760 0162 0041
VCR	Cybernex	0240 0051
VCR	Daewoo	0045 0278 0020 0561
VCR	Daytron	0020
VCR	Denon	0042
VCR	Dynatech	0000
VCR	Electrohome	0037
VCR	Electroponic	0037
VCR	Emerex	0032
VCR	Emerson	0037 0184 0000 0121 0043 0209 0002 0278 0479 0561 0061 0208 0212 0068 0036 0295 0361 0088 0294 0211
VCR	Fisher	0047 0104 0054 0066
VCR	Fuji	0035 0033
VCR	Funai	0000
VCR	GE	0035 0060 0760 0048 0240 0202 0761 0065
VCR	Garrard	0000
VCR	Go Video	0432 0526 0643 0232 0279
VCR	GoldStar	0037 0038
VCR	Gradiente	0000 0008 0408
VCR	Grundig	0195
VCR	HI-Q	0047
VCR	Harley Davidson	0000
VCR	Harman/Kardon	0081 0038 0075
VCR	Harwood	0072 0068
VCR	Headquarter	0046
VCR	Hitachi	0000 0042 0041 0105 0065 0082 0396 0166
VCR	Hughes Network Systems	0042
VCR	JVC	0067 0041 0008 0206
VCR	Jensen	0041
VCR	KEC	0037 0278
VCR	KLH	0072

VCR	Kenwood	0067 0041 0038
VCR	Kodak	0035 0037
VCR	LXI	0037
VCR	Lloyd's	0000 0208
VCR	Logik	0072
VCR	MEI	0035
VCR	MGA	0240 0043 0061
VCR	MGN Technology	0240
VCR	MTC	0000 0240
VCR	Magnasonic	0278
VCR	Magnavox	0035 0039 0081 0000 0149 0110
VCR	Magnin	0240
VCR	Marantz	0035 0081
VCR	Marta	0037
VCR	Matsushita	0035 0162 0454
VCR	Memorex	0035 0037 1037 0048 0039 0047 0162 1162 1262 0000 0240 0104 0209 0454 0479 0046 0307
VCR	Minolta	0042 0105
VCR	Mitsubishi	0048 0067 0043 0061 0173 0075
VCR	Motorola	0035 0048
VCR	Multitech	0000 0072
VCR	NAD	0058
VCR	NEC	0067 0104 0041 0038 0040 0082
VCR	Nikko	0037
VCR	Nikon	0034 0253
VCR	Noblex	0240
VCR	Olympus	0035 0226
VCR	Optimus	0037 0048 1048 0162 1062 1162 1262 0104 0454 0432 0058
VCR	Optonica	0062
VCR	Orion	0184 0209 0002 0479 0295
VCR	Panasonic	0035 0225 0162 1062 1162 1262 1362 0454 0616 0077 0226 0378
VCR	Penney	0035 0037 0042 0240 0038 0054 0040
VCR	Pentax	0042 0105 0065
VCR	Philco	0035 0209 0479
VCR	Philips	0035 0081 1081 1181 0618 0062 0110
VCR	Pilot	0037

VCR	Pioneer	0067 0058
VCR	Polk Audio	0081
VCR	Portland	0020
VCR	Profitronic	0240
VCR	Proscan	0060 0760 0202 0761
VCR	Protec	0072
VCR	Pulsar	0039 0051
VCR	Quarter	0046
VCR	Quartz	0046
VCR	Quasar	0035 0162 1162 0454 0077
VCR	RCA	0035 0060 0760 0048 0042 0240 0149 0106 0202 0761 0105 0077 0058 0065
VCR	RCA	0060
VCR	Radio Shack	1037 0000
VCR	Radix	0037
VCR	Randex	0037
VCR	Realistic	0035 0037 0048 0047 0000 0104 0046 0062 0066
VCR	ReplayTV	0614 0616
VCR	Ricoh	0034 0253
VCR	Runco	0039
VCR	STS	0042
VCR	Salora	0075
VCR	Samsung	0045 0240 0053 0051
VCR	Samtron	0643
VCR	Sanky	0048 0039
VCR	Sansui	0000 0067 0209 0041 0479 0271 0082
VCR	Sanyo	0047 0240 0104 0046
VCR	Scott	0184 0045 0121 0043 0212 0210 0211
VCR	Sears	0035 0037 0047 0000 0042 0104 0046 0105 0054 0066
VCR	Semp	0045
VCR	Sharp	0048 0062
VCR	Shintom	0072
VCR	Shogun	0240 0051
VCR	Singer	0072
VCR	Sony	0035 0032 1032 0000 0636 0033 0034 0253 0640
VCR	Sunpak	0253
VCR	Sylvania	0035 0081 0000 0043 0110
VCR	Symphonic	0000
VCR	TMK	0240 0208 0036

VCR	Tatung	0041
VCR	Teac	0000 0041
VCR	Technics	0035 0162
VCR	Teknika	0035 0037 0000
VCR	Thomas	0000
VCR	Tivo	0618 0636
VCR	Toshiba	0045 0043 0212 0066 0210 0366
VCR	Totevision	0037 0240
VCR	Unitech	0240
VCR	Vector	0045
VCR	Vector Research	0038 0040
VCR	Video Concepts	0045 0061 0040
VCR	Videosonic	0240
VCR	Wards	0035 0060 0760 0048 0047 0081 0000 0042 0240 0072 0149 0062 0212
VCR	White-Westinghouse	0209 0072 0278
VCR	XR-1000	0035 0000 0072
VCR	Yamaha	0038
VCR	Zenith	0039 0000 0209 0479 0033 0034 0637