




3 DEVICES

UNIVERSAL REMOTE CONTROL

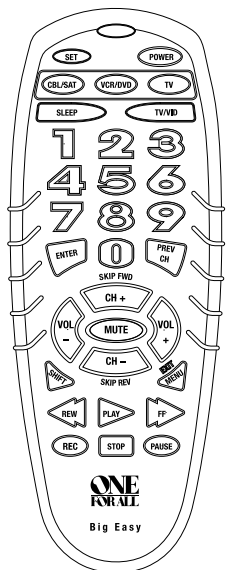

USER'S GUIDE

INTRODUCTION

The One For All 3 Devices Universal Remote Control is designed to operate three home entertainment devices, depending on the model purchased (see Key Charts, Mode Keys on the right).

The remote control requires four fresh AAA alkaline batteries (not included) and easy programming to control your devices. For best results, please read and perform all instructions listed here. Also, keep these instructions for future reference.

FEATURES AND FUNCTIONS

Use the Key Charts to learn how to use the universal functions of the One For All 3 Devices Universal Remote Control.

Key Charts

- SET: Use SET for all programming sequences.
The LED (red light) blinks to show that the remote control is working and is sending signals.
POWER: Press POWER once to turn on or off the selected device.

- Mode Keys for 3 Devices: Press VCR/DVD, TV, or CBL/SAT once to select a home entertainment device to control.
Use the keypad (0-9) to directly select channels (for example, 09 or 31).
MUTE: Press MUTE once to turn sound off or on.
PREV CH: Press PREV CH once to recall the last-viewed channel and to page back one screen on the main menu.
ENTER: Press ENTER once after entering channel numbers on some TV models.
MENU (or EXIT): Use MENU (or EXIT) to choose options (or exit) from your selected device's menu or guide.
VOL+ (or VOL-): Use VOL+ (or VOL-) to raise (or lower) the sound volume.
CH+ (or CH-): Use CH+ (or CH-) to select the next higher (or lower) channel.
SKIP FWD: When controlling a DVD player, use SKIP FORWARD to next DVD chapter., use SKIP REVERSE to the last DVD chapter.
SHIFT and MUTE: Press SHIFT and MUTE to select a menu item.
SLEEP: Press SLEEP to activate your device's sleep timer (not available for all devices).
Transport keys: Use the transport keys to control your VCR, CD or DVD player, or VOD. To record a program, press the record key (REC) twice.
TV/VID: use TV/VID to switch the TV's input to view TV or video program.

INSTALLING BATTERIES

- 1. On the remote control's back, push the tab and lift off the battery cover.
2. Obtain four (4) new AAA alkaline batteries. Match the + and - marks on the batteries to the + and - marks in the battery case, then insert the new batteries.
3. Press the battery cover back into place. The tab should click when the cover is locked.
4. Test the unit by pressing POWER and any mode key (e.g., TV). If the batteries are inserted correctly, the LED will blink once.

NOTE: When batteries need replacement, the remote control will stop operating. Remove the old batteries and insert new ones within 30 minutes to ensure all of your programming information is restored.

PROGRAMMING DEVICE CONTROL

The One For All 3 Devices remote control is preprogrammed at the factory to operate an RCA TV and VCR, a Motorola (GI) cable box, and a Toshiba DVD player. To control devices other than the default brands, perform the following steps; otherwise skip this section:

NOTE: For TV/VCR Combo control, see the next section.

- 1. Turn on a device (e.g., VCR) and, if applicable, insert media, (e.g., cassette or disc).
NOTE: Please read steps 2-4 completely before proceeding. Highlight or write down the codes and device you wish to program before moving on to step 2.
2. On the remote control, press a device key once (i.e., VCR/DVD, TV, or CBL/SAT). Press and hold SET until the LED blinks twice, then release SET.
3. Use the Manufacturer's Codes to locate the type of device and brand name and then enter the first four-digit code for your component. If performed correctly, the LED will blink twice.
NOTE: If the LED did not blink twice, then repeat steps 2 through 3 and try entering the same code again.
4. Aim the remote control at the device and press POWER once. The device should turn off. If it does not respond, repeat steps 2-3, trying each code for your brand until you find one that works. If it still does not work, try Searching For Your Code.
NOTE: If the device does not have a POWER key, press the (PLAY) key.
5. Repeat steps 1 through 4 for each device you want to control.

PROGRAMMING TV/VCR COMBO CONTROL

Perform the following instructions to control a TV/VCR Combo:

- 1. Turn on the TV/VCR Combo and insert a video cassette.
NOTE: Please read steps 2-4 completely before proceeding. Highlight or write down the codes and device you wish to program before moving on to step 2.
2. On the remote control, press VCR/DVD. Press and hold SET until the LED blinks twice, then release SET.
3. Use the Setup Codes For TV/VCR Combos (on the back side) to locate the brand name and then enter the first four-digit code for your device. If performed correctly, the LED will blink twice.
NOTE: If the LED did not blink twice, then repeat steps 2 through 3 and try entering the same code again.
4. Aim the remote control at the device and press POWER once. It should turn off. If the device does not respond, repeat steps 2-3, trying each code for your brand until you find one that works. If it still does not work, try Searching For Your Code.
NOTE: If the device does not have a POWER key, press the (PLAY) key.

SEARCHING FOR YOUR CODE

If your device does not respond to the remote control after trying all codes listed for your brand, or if your brand is not listed at all, try searching for your code. For example, to search for a code for your TV:

- 1. On the remote control, press TV once.
2. Press and hold SET until the LED blinks twice, then release SET.
3. Enter 9 - 9 - 1. The LED will blink twice.
4. Aim the remote control at the the TV and slowly alternate between pressing POWER and TV. Stop when the TV turns off.
NOTE: In the search mode, the remote control will send IR codes from its library to the selected device, starting with the most popular code first.
5. To lock in the code, press and hold SET until the LED blinks twice, then release SET.
6. To search for the codes of your other devices, repeat steps 1 through 5, but substitute the appropriate device key for the device you are searching for.

CHECKING THE CODES

If you have set up the remote control using the Searching For Your Code procedure, you may need to find out which four-digit code is operating your equipment:

For example, to find out which code is operating your TV:

- 1. On the remote control, press TV once.
2. Press and hold SET until the LED blinks twice, then release SET.
3. Enter 9 - 9 - 0. The LED will blink twice.
4. To view the code for the first digit, press 1 once. Wait 3 seconds, count the LED blinks (e.g., 3 blinks = 3) and write down the number.
NOTE: If a code digit is "0", the LED will not blink.
5. Repeat step 4 three more times for remaining digits. Use 2 for the second digit, 3 for the third digit, and 4 for the fourth digit.
6. To check for codes of other devices, repeat steps 1 through 5, but substitute the appropriate device key for each device you are checking. As before, write down each four-digit code.

RE-ASSIGNING DEVICE KEYS

The One For All 3 Devices can be set to control a second TV, VCR, or DVD player.

For example, to control two TVs, a VCR, and a cable box, you will need to re-assign the unused VCR/DVD key to operate the second TV as follows:

- 1. On the remote control, press and hold SET until the LED blinks twice, then release SET.
2. Enter 9 - 9 - 2. The LED will blink twice.
3. Press TV once, then press VCR/DVD once.
4. The VCR/DVD key is now ready to be programmed for your second TV. See Programming Device Control.

To re-assign other device keys, repeat steps 1 through 4 by substituting the key sequence from the below chart for the most popular components:

Table with 2 columns: To Re-Assign Key Sequence and Perform. Rows include VCR/DVD as 2nd TV key, VCR/DVD as 2nd CBL key, and VCR/DVD as 2nd SAT key.

VCR/DVD back to VCR/DVD: SET - 9 - 9 - 2 - VCR/DVD - VCR/DVD

When a re-assignment is done, the LED will blink twice to confirm your choice. At that time, you will need to program the remote control for the new device (see Programming Device Control).

CHANGING VOLUME LOCK

The One For All 3 Devices is set to control the volume of your TV in the TV, VCR, CBL/SAT, and DVD modes. If you want the volume to be controlled by a mode other than TV (e.g., CBL/SAT), change the Volume Lock as follows:

To Change Volume Lock To Another Mode:

- 1. On the remote control, press and hold SET until the LED blinks twice, then release SET.
2. Enter 9 - 9 - 3 and then press any mode key once (except TV). The LED will blink twice.
3. Now, whenever you press VOL+, VOL-, or MUTE, volume will be controlled by your mode choice.

Unlocking Volume Control:

NOTE: Perform these instructions when you want independent volume control for each programmed device (e.g., TV volume control in TV mode, CBL/SAT volume control in CBL/SAT mode, etc.)

- 1. On the remote control, press and hold SET until the LED blinks twice, then release SET.
2. Enter 9 - 9 - 3 and then press VOL+. The LED will blink four times.
3. Volume will again be controlled according to its default states.

TROUBLESHOOTING

For assistance, please contact us in any of the following ways:

- Consumer Help Line: (330) 405-8612
Internet: http://www.oneforall.com

- PROBLEM: LED does not blink when you press a key.
SOLUTION: Replace batteries with four new AAA alkaline batteries.
PROBLEM: LED blinks when you press a key, but home entertainment component does not respond.
SOLUTION: Make sure the remote control is aimed at your home entertainment device and is not farther than 15 feet away.

PROBLEM: The unit does not control home entertainment devices or commands are not working properly.

SOLUTION: Try all listed codes for the component brands being set up. Make sure they can be operated with an infrared remote control.

PROBLEM: TV/VCR combo does not respond properly.

SOLUTION: Use the VCR codes for your brand. Some combo units may require both a TV code and a VCR code for full operation.

PROBLEM: Changing channels does not work properly.

SOLUTION: If original remote control required pressing ENTER to change channels, press ENTER on the remote control after entering the channel number.

PROBLEM: Tried "Search Method" and still could not find a working code.

SOLUTION: Clear the device key as follows: Press and hold SET until the LED blinks twice, then release. Next enter 9 - 9 - 2. Then press the device key to be cleared twice. Now repeat the "Search Method."

PROBLEM: CH▲ and CH▼ do not work for your RCA TV.

SOLUTION: Due to RCA design (1983-1987), only the original remote control will operate these functions.

PROBLEM: Remote control does not turn on Sony or Sharp TV/VCR Combo.

SOLUTION: For power on, these products require programming TV codes. For Sony, use TV code 0000 and VCR code 0032. For Sharp, use TV code 0093 and VCR code 0048.

LIFETIME WARRANTY

One For ALL ("OFA") warrants this product to be free from defects in materials and workmanship, under normal use, throughout the period of the product's ownership by the original purchaser. This warranty does not cover damage or failures caused by products or services not supplied by OFA, or which result from accident, misuses, abuse, neglect, mishandling, misapplication, faulty installation, set-up adjustment, improper maintenance, alteration, maladjustment of consumer controls, modifications, commercial use, or that is

attributable to acts of God.

There are no express warranties except as listed above. OFA SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT OR ARISING OUT OF ANY BREACH OF WARRANTY. ALL EXPRESS AND IMPLIED WARRANTIES, INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE WARRANTY PERIOD SET FORTH ABOVE. Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

To obtain warranty service for a defective product, please return the product, preferably in the original carton, along with your purchase receipt, to the store of original purchase for the first 90 days. A note detailing the complaint would be helpful. The store, at its option, will replace or repair this product if found to be defective.

If the unit has been purchased more than 90 days ago, pls return it to Impact Distribution Services, 6262 Patterson Pass Road, Suite C, Livermore, CA 94550 together with the original receipt and \$3.95 to cover postage and handling. It will be repaired or replaced at the manufacturer's option. The manufacturer reserves the right to substitute a currently manufactured model with equal or superior features.

ADDITIONAL INFORMATION

ONE FOR ALL® is the registered trademark of Universal Electronics Inc. Computime International Ltd. is the Licensee of the ONE FOR ALL® brand for USA and Canada.

Copyright 2001 by Universal Electronics Inc. No part of this publication may be reproduced, transmitted, transcribed, stored in any retrieval system, or translated to any language, in any form or by any means, electronic, mechanical, magnetic, optical, manual, or otherwise, without the prior written permission of Universal Electronics Inc.

One For All® 3 Devices is compatible for use in North America excluding Mexico.